

Total Disassembly of the Star Super

Based on a translation of the Spanish manual and my own disassembly, S.G. Ladd, 1/25/03.

1. All pins exit leftward except the trigger pin (X-17) and ejector pin (X-51), which exit the opposite way.
2. Remove the grip panels (X-35) by removing the 4 screws (X-36).
3. Gripping the gun as shown in Figure 9, with the left index finger pushing the magazine release button (X-32) all the way in, turn the catch-screw (X-31) on the right side counter-clockwise, locking shut the internal spring. Slide the magazine release out to the right as shown in Figure 10.



Fig. 9

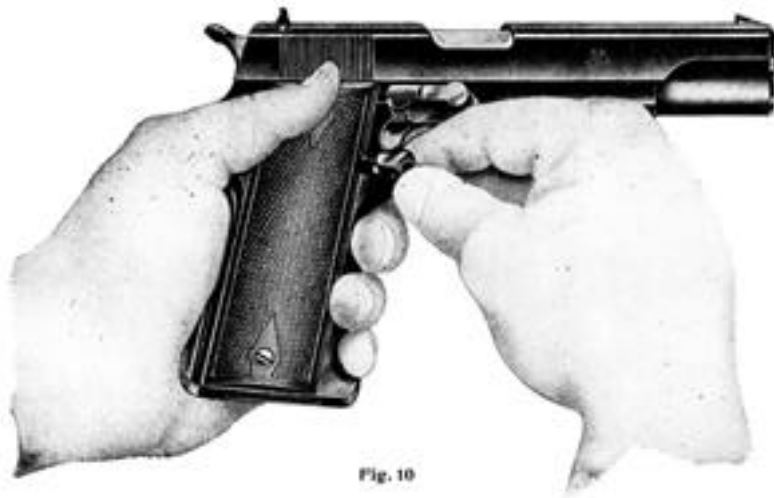


Fig. 10

4. Remove the trigger pin. Push the trigger (X-16) and trigger transfer bar (X-37) backwards out, united. The slide-activated interrupter (X-21) will now slide downward out.

5. To separate the trigger from the trigger transfer bar, extract the drift pin. This will also separate pieces X-38 and X-39.
6. Remove the pin (X-19) of the sear (X-18) and the spring (X-20) will be freed.
7. Lightly knock leftward with a copper punch the pin (X-23) of the hammer (X-22) with the hammer down. The spring (X-24) will remain in your hand with the frame inclined downward.
8. Turn the safety (X-26) up until its spring-loaded retainer pin is exposed (it will spring outward but stay in place) and pull the safety in this position out the left side.
9. To remove the disassembly latch (X-48), turn it 90 degrees downward from the slide and pull it out to the side while rotating it, say, 88-92 degrees.
10. The slide-stop (X-8) has on its flat end a screw (X-46) which, removed, frees the slide-stop piston (X-49).
11. Remove the magazine safety (X-41) the same way as the magazine release, removing first the magazine, with the disassembly latch forward.
12. Remove the pin (X-14) of the extractor (X-13) upward. It and the extractor spring (X-15) will come loose.
13. To remove the rear sight (X-11), knock it with a copper punch leftward.
14. The cartridge-in-chamber indicator (X-40) exits by knocking it forward. (After removing the same pin that holds the firing pin?)
15. Remove the pin (X-12) retaining the firing pin (X-9) upward. Inclining the slide, the firing pin and its spring (X-10) will exit.

NOMENCLATURE SUPER STAR

X-1	Armazón o armadura (Frame)
X-2	Cerrojo o corredera (Slide)
X-3	Cañón (Barrel)
X-4	Muelle recuperador (Recoil Spring)
X-5	Tapón del muelle recuperador (Recoil Spring Cap)
X-6	Manguito (Slide Bushing)
X-7	Guía-Tope (Recoil Spring Guide Rod)
X-8	Retenida (Slide Stop)
X-9	Aguja de percusión (Firing pin)
X-10	Resorte de la aguja de percusion (Firing Pin Spring)
X-11	Mira (Rear Sight)
X-12	Pasador de la aguja (Firing Pin Retaining Pin)
X-13	Extractor (Extractor)
X-14	Eje del extractor (Extractor Pin)
X-15	Resorte del extractor (Extractor Spring)
X-16	Disparador (Trigger)

X-17	Eje del disparador (Trigger Pin)
X-18	Fiador (Sear)
X-19	Eje del fiador (Sear Pin)
X-20	Resorte del fiador (Sear Spring)
X-20B	Pasador de resorte del fiador (Sear Spring Retaining Pin)
X-21	Interruptor (Interruptor)
X-22	Percutor (Hammer)
X-23	Eje del percutor (Hammer Pin)
X-24	Resorte del percutor (Hammer Spring)
X-25	Pitón del resorte del percutor (Hammer Spring Plunger)
X-26	Seguro de aleta (Safety Lever)
X-27	Pitón del seguro (Safety Detent Plunger)
X-28	Resorte del seguro (Safety Detent Spring)
X-29	Cargador (Magazine)
X-30	Elevador (Magazine Follower)
X-31	Pestillo del diente del cargador (Magazine Latch Lock)
X-31B	Resorte del enganche del cargador (Magazine Latch Lock Spring)
X-32	Diente de retinida del cargador (Magazine Latch)
X-34	Resorte del cargador (Magazine Spring)
X-35	Cacha (Grip Panel)
X-36	Tornillo de cacha (Grip Screw)
X-37	Biela (Transfer Bar)
X-37B	Eje de biela (Transfer Bar Pin)
X-38	Pitón del disparador (Trigger Plunger)
X-39	Resorte del disparador (Trigger Plunger Spring)
X-40	Indicador de cartucho en la Recámara (Loaded Chamber Indicator)
X-41	Seguro de cargador (Magazine Safety)
X-42	Anilla (Lanyard Ring Assembly)
X-43	Resorte del seguro de cargador (Magazine Latch Spring)
X-44	Tapón del cargador (Magazine Floor Plate)
X-45	Pitón de retenida (Slide Stop Plunger)
X-46	Tornillo de retenida (Slide Stop Plunger Retaining Screw)
X-47	Pestillo del seguro de cargador (Magazine Safety Lock)
X-48	Pestillo de desarme (Take Down Latch)
X-49	Resorte de retenida (Slide Stop Plunger Spring)
X-50	Botador (Ejector)
X-51	Pasador de botador (Ejector Pin)
X-52	Punto de mira o puntería (Front Sight)
X-53	Enganche de tapón de cargador (Magazine Floorplate Catch)

